

RNAV (GPS) RWY 21

AKIAK (AKI) (PFAK)



APP CRS 211°	Rwy Idg 3196
	TDZE 30
	Apt Elev 30

▲ NA Use Bethel altimeter setting.
GPS or RNP-0.3 Required. DME/DME RNP-0.3 NA.
Bethel ATIS/ASOS 119.8
Bethel ASOS: OSE 251, BET 114.1

ANCHORAGE CENTER
125.2 372.0

MISSED APPROACH: Climb to 2000 direct WATNU WP and hold.

CTAF
122.9 0

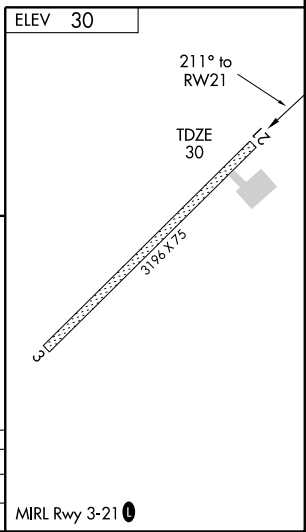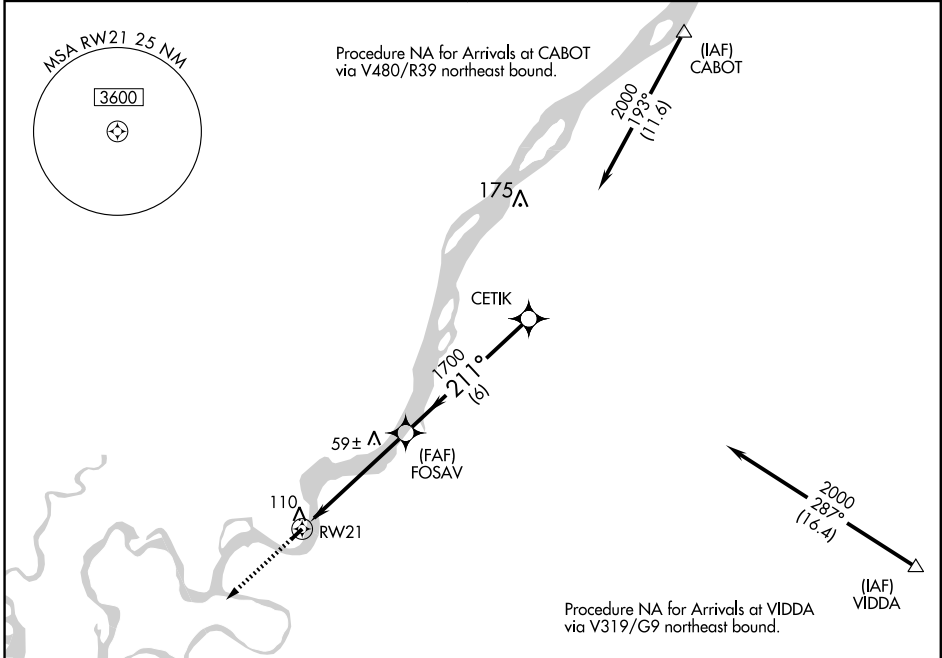

2000	WATNU	CETIK
↑	\star	
RWY 21	FOSAV	2000
	211°	Procedure Turn NA
	≤ 3.05° TCH 40	
	5 NM	6 NM

CATEGORY	A	B	C	D
LNNAV MDA	420-1	390 (400-1)		NA
CIRCLING	480-1	450 (500-1)		NA

AK, 02 JUL 2009 to 27 AUG 2009

AK, 02 JUL 2009 to 27 AUG 2009